

PARLIAMENT

PARLIAMENT


84391-D1

STEP 1

PUSH CHILD-RESISTANT
LATCH IN AND
THEN UP.

group 2

PUSH IGNITION
LEVER DOWN
TO LIGHT.

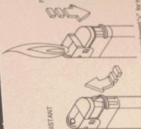

TO ADJUST FLAME: While ignited, move lever toward "+" for higher flame, toward "-" for lower flame.

FOR MAXIMUM SAFETY, KEEP CHILD-RESISTANT LATCH DOWN WHEN NOT IN USE.

WARNING: READ CAREFULLY

WARNING: READ CAREFULLY

... (faint text) ...

KEEP OUT OF REACH OF CHILDREN
Caution: To keep from a child's eyes.
Caution: To keep from a child's eyes.

... is known as "voldprent." The child's constant nature is...

CELLULOSE

GUARANTEE
Should your Scupper® lighter prove defective under normal use, return it to us with a receipt and we will replace it. For all Normal Lighter and long, write to Scupper, Ltd., P.O. Box 1000, Fortbank, CA 94724 (510) 832-2440. (800) 24-4000. E.A. 408.